Picture Frame

Creations Woodshop Class www.youngfoundations.org/creations





Lesson	page 2
Tutorial	pages 3-10

Lesson

Scripture:

ROMANS 11:29

29 For the gifts and calling of God are without repentance.

Quotes:

QUOTE:

0117 HOW.THE.ANGEL.CAME.TO.ME.AND.HIS.COMMISSION_ CHICAGO.IL FOOTPRINT.BOOK MONDAY_

« 281 † I believe that It is the same Pillar of Fire that led the children of Israel from Egypt to Palestine. I believe It's the same Angel of Light that come in the--in the jail and come in to Saint Peter and touched him, and went forward and opened the door and put him out into the light. And I believe that It's Jesus Christ the same yesterday, today, and forever. Amen! He's the same Jesus today that He was yesterday. He will be forever the same Jesus.

And while I'm talking about It, that same Light that's on that picture is on... standing not two feet from where I'm standing right now. That's right. I can't see It with my--my eyes, but I know It's standing here. I know It's settling withinside of me right now. Oh! If you could only know the difference when the power of Almighty God catches, and how things look different!

Picture Frame Tutorial

Tools Needed

- Table Saw
- Clamps
- Measuring tape
- Sandpaper
- Safety glasses
- Pin nail gun

Materials Needed

- Assorted wood
- Wood glue
- Finish
- Pillar of Fire picture
- Cardboard 9 1/2" x 7 1/2"
- Lexan or Plexiglass

^{***} Parental assistance recommended.

Steps





2. Cut a 48" x ½" x ¼".



3. Sand.




4. Glue and nail the ½" piece to the 1" piece so that there is a ¼" on either side.



5. Let glue dry.



6. Cut at a 45 degree so that there are two 9 ½" short point-to-short point pieces, and two 7 ½" pieces short point-to-short point. ** Note ** accurate cuts are critical for perfect mitre joints.

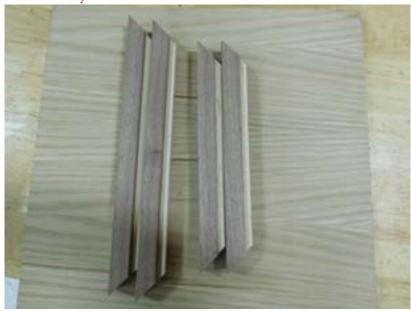

7. Glue and pin nail making sure that the frame is square until the glue dries.




8. Sand.



9. Apply finish.



10. Cut Plexiglass 9 ½" x 7 ½".

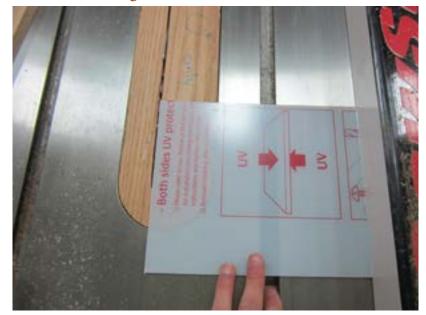

11. Place plexiglass inside.



12. Place picture and cardboard in frame.



13. Secure cardboard in place. We lowered the air pressure so that the pin nails would not go in all the way to hold the cardboard.





YOU'RE DONE!!!