

Sound Box



Creations Woodshop Class

www.youngfoundations.org/creations



Time to Complete



6 HRS.

Lesson.....page 2

Tutorial.....pages 3-9

Lesson

Scripture:

Psalm 143:8 King James Version (KJV)

8 Cause me to hear thy lovingkindness in the morning; for in thee do I trust: cause me to know the way wherein I should walk; for I lift up my soul unto thee.

Quotes:

Quote 1:

64-0614M THE.UNVEILING.OF.GOD_ JEFFERSONVILLE.IN V-9 N-1 SUNDAY_ 165 God's first appearing, to Moses, in the burning bush, veil. Before the people, God veiled again and vindicated Moses, by the veil, by veiling Himself with the same Fire, same Pillar of Fire came down. From—from then...From them, so they could only hear God's Word. You get it? Just the Word, they heard His Voice.

Quote 2:

64-0614M THE.UNVEILING.OF.GOD_ JEFFERSONVILLE.IN V-9 N-1 SUNDAY_ 212 Notice now, so it can be manifested. The Word has had a veil over It all these years, to the people, "It can't be done."

213 You remember the sermon I preached the morning when I left here the first time, about Goliath and David? I said, "Look at the challenger out there, saying that 'the days of miracles is past.'"

Watch them tapes as they come down, watch each one, how It's come in more plainer and plainer; if you have ears to hear, see, eyes to see

Sound Box Tutorial

Tools Needed

- Clamps
- Measuring tape
- Sandpaper
- Safety glasses
- Table saw
- Bandsaw
- Drill press

Materials Needed

- Assorted wood
- Wood glue
- Finish

*** Parental assistance recommended.

Steps

1. Cut three 4"x 8" x 3/4" pieces of wood. Cut two 4"x 8" x 1/8" pieces of wood.



2. Trace out cell phone or iPod on one of the 3/4" blocks from step one. ** Note** note cell phone placement when tracing, from picture below.



4

3. Cut out the pattern on your bandsaw.



4. Drill a 3 1/2" hole on the same piece as your pattern.



5

5. Cut a sound channel to connect the two cutouts.



6. Drill out 3 1/2" hole in same place on the other two 3/4" blocks.




6

7. Glue the 3/4" blocks together so that all the 3 1/2" holes line up. Make sure that phone cut out is in the middle.



7. Drill desired pattern of sound holes in one of the 1/8" piece. Make sure the placement of the sound holes matches up with the 3/4" block.

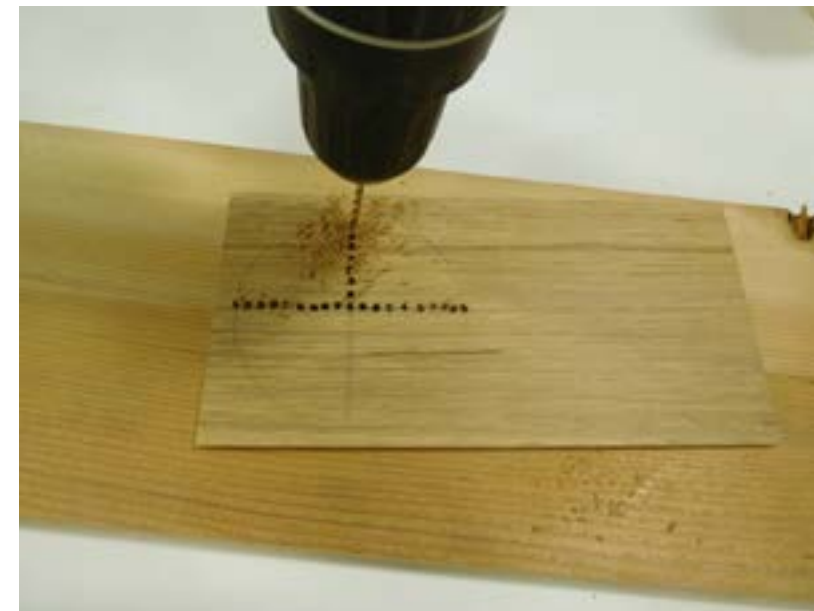

7

9. Glue the 1/8" pieces on the front and back, placing your drilled out holes over your 3 1/2" holes.



10. Sand.



11. Apply finish.



YOU'RE FINISHED!!!